

What to do if...

What to do if...



A tire punctures.

P. 517 If you have a flat tire



The hybrid system does not start.

P. 526 If the hybrid system will not start

P. 133 Immobilizer system

P. 535 If the 12-volt battery is discharged



The shift lever cannot be moved out.

P. 528 If the shift lever cannot be shifted from "P"



The high coolant temperature warning light comes on.

P. 539 If your vehicle overheats



Steam can be seen coming from under the hood.



The key is lost.

P. 52 If you lose your keys



The 12-volt battery runs out.

P. 535

If the 12-volt battery is discharged



The doors cannot be locked.

P. 70

Doors



The horn begins to sound.

P. 135

Alarm



The vehicle is stuck in mud or sand.

P. 543

If the vehicle becomes stuck

What to do if...



A warning light or indicator light comes on.

P. 504

If a warning light turns on or a warning buzzer sounds...



Warning lights



Brake system warning light

or



P. 504



Malfunction indicator lamp

or



P. 505



"ABS" warning light

or



P. 505



Driver's seat belt reminder light

P. 508



Front passenger's seat belt reminder light

P. 508



Brake system warning light

P. 505



High coolant temperature warning light

P. 508



Low fuel level warning light

P. 508



Master warning light

P. 508



SRS warning light

P. 505



Electric power steering system warning light

P. 505









Open door warning light

P. 508



Tire pressure warning light

P. 508

	Charging system warning light	P. 504
	Slip indicator	P. 505
	"AFS OFF" indicator*	P. 505
	Pre-collision system warning light*	P. 505
	Cruise control indicator*	P. 505
	Automatic High Beam indicator light*	P. 505

\*: The light flashes to indicate a malfunction.